

# Brooklyn

L I V I N G M A D E E A S Y

## DESIGNER TOASTER

BETO4-18CG



## INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.



# CONTENTS

---




General Safety	4
Product Overview	11
Before first use	12
Instructions	13
FAQs and troubleshooting guide	16
Other useful information	17
Specifications	18
Customer Helpline	Last Page

---

# GENERAL SAFETY

## IMPORTANT INFORMATION

- Read this manual thoroughly before you start using the product.
- The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.
- Please follow all instructions and take notice of all warnings.

 <b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	 	<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p> <p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>
<p>This unit must be serviced by a qualified service personnel only.</p>		

## IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

# GENERAL SAFETY (Cont.)

- This appliance is intended for private household use only. It is not intended for commercial/industrial or trade use. Do not use it outdoors.
- Do not use this toaster for anything other than its intended purpose, and only use it as described in this manual. Any other use is not recommended and may cause fire, electric shock or injury.
- Misuse of the appliance may result in potential injury, risk of fire and/or electric shock. We accept no liability for any eventual damages or injury misuse of the product or noncompliance with the instructions.
- When using the toaster, it must be on a stable, secure, dry and level surface, out of children's reach, to prevent damage or injury.
- **DO NOT** operate the toaster under the following conditions:
  - \* In a damp place or in areas with high humidity (such as in a bathroom)
  - \* On or near a hot cooktop, in a heated oven, or near an open flame.
  - \* On a metal tray.
  - \* In confined spaces or under overhanging furniture/structures.
- The use of accessory attachments not recommended in this manual may cause electric shock, fire or personal injuries.
- **WARNING:** Do not put anything else (such as oversized food, metal foil packages or utensils) into the toasting slots. Doing so may create a fire or electric shock hazard.
- Crumb tray: To avoid the risk of fire, remove crumbs from the crumb tray after each use. Pull the crumb tray out completely, discard the crumbs and wipe it clean with a dry or damp cloth. Make sure the tray is dry and properly in place before reuse.
- Do not leave the toaster unattended when the power is turned on.
- Ensure the toaster is switched off before removing it from the base.
- Do not move the appliance while it is switched on.
- Always unplug the toaster from the outlet when it is not in use. To disconnect, turn off the power at the outlet, then remove the plug from the wall. Grip the plug when disconnecting, do not pull the cord.
- **CAUTION:** Unplug the toaster and allow it to cool before cleaning and maintenance. To prevent damage to the appliance, do not use abrasive or alkaline cleaning agents when cleaning. Use a soft cloth and a mild detergent.

## GENERAL SAFETY (Cont.)

### CAUTION: HOT!

- Do not touch any part of the toaster housing when it is in use. The surfaces get hot. Only touch the handle. Do not put any part of your hand or body near the toaster when it is turned on.
- Take care when handling the toaster after use.
- **WARNING:** Do not place your hand inside the toaster while in use.
- Wait for the toaster to complete toaster, and push up the bread for it to then be easily removed.
- The toaster heats up and can cause burns. The temperature of accessible surfaces, especially the toaster's metal parts, can become very hot when the appliance is operating. Do not touch hot surfaces during or immediately after use. Use handles or knobs.
- Always use oven mitts when handling hot material and allow metal parts to cool before cleaning.
- Take care when taking out hot bread slices after toasting to avoid injuries.
- The product are not intended to be operated by means of an external timer or separate remote-control system.
- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.

# GENERAL SAFETY (Cont.)

## ELECTRICAL SAFETY AND POWER CORD HANDLING

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating label and your outlet socket is properly earthed. If this is not the case, do not use the toaster.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or any non-removable parts of this toaster in water or other liquid, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the appliance.  
**WARNING:** If the toaster falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water!
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, service agent or appropriately qualified personnel in order to avoid any hazards.  
**WARNING:** Do not pick up or operate the appliance if the cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any way. In case of damage, contact our after sales support centre for advice.
- **Power cord:** Do not kink, bend, strain or damage the power cord and protect it from sharp edges and heat. Do not let it touch hot surfaces. Do not let the cord hang over the edge of a table or benchtop.
- **No extension cord, no timer:** Do not use this toaster with an extension cord, plug adaptor, external timer or separate remote control system.
- **Disconnect:** Unplug the toaster from the outlet when it is not in use and before cleaning. Grip the plug when disconnecting, do not pull the cord.
- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

# GENERAL SAFETY (Cont.)

## USAGE CONDITIONS AND RESTRICTIONS

- **Domestic use only:** This appliance is intended for indoor household use only. It is NOT suitable for commercial, industrial or trade use.
- **No outdoor use:** Do not use the appliance outdoors.
- **Intended use:** The appliance is only suitable for toasting bread products. Do not use it for anything other than its intended purpose, and only use it as described in this manual.
- **WARNING:** Do not put anything else (such as oversized food, metal foil packages or utensils) into the toasting slots. Doing so may create a fire or electric shock hazard.
- **Attachments:** The use of accessory attachments not recommended in this manual may cause electric shock, fire or personal injuries.
- **Usage restriction:** The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** Supervise children to ensure they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- **Misuse** of the appliance may result in potential injury, risk of fire and/or electric shock. We accept no liability for any eventual damages or injury caused by misuse of the product or noncompliance with the instructions.



# GENERAL SAFETY (Cont.)

## SAFE USAGE

- **Before first use:** Make sure you know how to use the toaster before first use.
- **Clearances:** When using the toaster, make sure there is adequate air space above and on all sides for air circulation.
- **Work surface:** Place the toaster on a dry, stable, flat, heat-resistant surface.
- **WARNING: DO NOT use the toaster under the following conditions:**
  - \* **On or near a gas or electric hob, in a heated oven or near an open flame.**
  - \* **On a soft surface (such as carpet) or where it may tip over during use.**
  - \* **Outdoors or in areas of high humidity.**
  - \* **Near or below materials that can ignite easily (such as curtains, drapes, wall hangings, tea towels) or underneath wall cabinets, as bread may burn and cause a fire if it is toasted for too long.**
  - \* **In an appliance garage, pantry or other confined space, or under overhanging furniture/structures.**
- **Do not cover:** Do not cover the toaster or place anything on top during use.
- **Do not insert any objects** into the appliance.
- **Smoke or fire:** Immediately cancel the toasting process and unplug the appliance if fire or smoke is emitted.
- **Unattended:** Do not leave the toaster unattended when it is switched on. Disconnect it from the power supply when you are finished with it or when leaving the room. This is important as bread products may catch fire when overheated.
- **Malfunction:** If this appliance begins to malfunction during use, or if fire or smoke is emitted, immediately press the CANCEL button and unplug the cord. Do not use or attempt to repair a malfunctioning appliance. Contact our after sales support centre for advice.
- **Cleaning:** Maintain the toaster in accordance with the instructions to ensure it functions properly. Disconnect the appliance before moving and cleaning it. Allow it to cool completely before cleaning and storing. Never use abrasive cleaners, scouring pads, or any hard and sharp objects for cleaning. Never place any part of the appliance in an automatic dishwasher.

## GENERAL SAFETY (Cont.)

- **Crumb tray:** Ensure the crumb tray is in place before using the toaster. To avoid the risk of fire, remove crumbs from the crumb tray after each use. Pull the crumb tray out completely, discard the crumbs and wipe it clean with a dry or damp cloth. Make sure the tray is dry and properly in place before reuse.
- **Storage:** When not in use, store your appliance and its instruction manual in a safe and dry place.

### CAUTION: HOT SURFACES!



The toaster heats up and can cause burns. The temperature of accessible surfaces, especially the toaster's metal parts, can become very hot. Do not touch hot surfaces during or straight after use. Use handles or knobs.

- Always use oven mitts when handling hot material and allow metal parts to cool before cleaning.
- Take care when taking out hot bread slices after toasting to avoid injuries.

### WARNING: ELECTRIC SHOCK HAZARD!

- **Never attempt to dislodge food from inside the toaster when it is plugged into an electrical outlet. Always unplug it and let it cool first.**
- Never use a knife or any other sharp metal tool to remove the bread, and do not touch the metal parts inside the toaster.

# PRODUCT OVERVIEW



1. **Bread slots**
2. **Bread levers**
3. **Browning control knobs**
4. **CANCEL buttons**
5. **DEFROST buttons**
6. **REHEAT buttons**
7. **Removable crumb trays (at the back, not visible here)**

# BEFORE FIRST USE

- **Unpack:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging is to be disposed of, please recycle it where possible. Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach. Dispose of any plastic wrapping safely.
- **Documentation:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the product overview, opposite, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Cord:** Wipe the outside of the toaster with a damp cloth. Make sure there is no packaging material remaining in the slots and under the bread loading levers.
- **Preliminary use:** Keeping the safety instructions from the previous pages in mind, place the toaster on an appropriate surface and plug it into an easily accessible wall outlet.
- Set the two browning controls to the maximum level.
- Push down the levers and let your toaster heat up without any bread. This is to ensure any remnants from transport and the manufacturing process are burnt off.
- After a short cooling down period, your toaster is now ready for use.
- **NOTE** - You may notice a slight burning smell or smoke when first using the toaster. This is no cause for concern. Ensure good ventilation and let the toaster complete a few toasting cycles until no more odour or smoke is present.

# INSTRUCTIONS

## TOASTING BREAD

- Make sure the crumb trays are properly in place before using the toaster. They are located underneath the heating elements and can be accessed from the back of the toaster.
- Place the toaster on an even and heat-resistant surface, connect it to a properly installed wall socket and switch on power to the outlet.
- Place up to 4 slices of bread into the bread slots.
- Set the browning level with the browning control knob(s). (For two slices of toast, use one browning control knob, for four slices, use both knobs.) The higher the number, the longer the toasting time and the darker the toast.

KNOB POSITION	BROWNING LEVEL
1-2	For thinly sliced, or slightly dry bread
3-5	For fresh, medium thick slices of white or wholemeal bread
6	For frozen, or very thick slices

- Push down the bread lever(s) completely to switch on the toaster. The lever(s) will only stay down when the toaster is connected to the power outlet and the power is switched on. The CANCEL button indicator will illuminate; press it at any time to stop toasting. **NOTE:** The toaster automatically adjusts the slot width when the bread lever is pushed down to accommodate slices of different thickness.
- When the toast is ready, the bread lever(s) move(s) up and the toaster switches off automatically. You can now remove the toast from the toaster. **NOTE:** If toast does not clear the top of the toaster, push up the bread lever to raise the food up for easy removal. **CAUTION:** Do not touch the metal parts of the toaster as they become hot during toasting.
- If toasting more than four slices of bread, allow the toaster 15 to 20 seconds to cool down before beginning the next toasting cycle so the electronically controlled thermostat can reset.
- After several toasting cycles, pull out the crumb trays and clean them.

# INSTRUCTIONS (Cont.)

## WARNING!

If bread becomes stuck inside the toaster, unplug the toaster and let it cool before trying to remove the bread. **Do not use a knife or any other sharp metal tool to do so, and do not touch the metal parts inside the toaster.**

### TOASTING FROZEN BREAD

The toaster has a special defrost setting for thawing and toasting frozen bread.

- Put your frozen products (slices, waffles, etc.) into the bread slots.
- Select the browning level.
- Push down the bread lever(s).
- Press the DEFROST button(s). The defrost indicator light(s) come(s) on and stay(s) illuminated during the defrosting/toasting process.

### REHEATING TOASTED BREAD

Use this function to reheat bread products (without toppings) that were toasted earlier and have cooled.

- Put the toasted bread slices, waffles, etc. back into the bread slots.
- Push down the bread lever(s)
- Press the REHEAT button(s). The reheat indicator light(s) come(s) on and stay(s) illuminated during the reheating process.

### INDICATOR LIGHTS

- When the DEFROST or REHEAT buttons are pressed, the relevant indicators light up and remain illuminated until the toast cycle is complete, or until the CANCEL button is pressed.
- When the toasting lever is pressed down, the CANCEL buttons(s) light(s) up and remain(s) illuminated until it is pressed, or until the toast cycle is complete.

# INSTRUCTIONS (Cont.)

## **SOME TIPS FOR PERFECT TOASTING**

- Toasting is a combination of cooking and drying bread. As moisture levels differ from one bread to another, toasting times can vary.
- Bread products with a very uneven surface will require a higher setting. Thickly cut pieces of bread will take longer to toast, sometimes significantly longer, since more moisture must be evaporated before toasting can occur.
- When toasting raisin or other fruit bread, remove loose raisins from the surface of the bread before placing the slices into the toaster. This will help prevent pieces from falling into the toaster or sticking on the guard wire in the slot. If you are toasting a single slice of bread, select a lighter browning setting than usual. The toaster is designed to heat a whole toasting chamber for two slices. By reducing the time for toasting a single slice, it will not be over-toasted.

# FAQS AND TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
<b>The toaster is not working</b>	Check the power connection and ensure the plug is properly inserted in the outlet. Make sure power to your electrical outlet is switched on.
<b>Bread is stuck in the toaster.</b>	Unplug the toaster and let it cool down. Then carefully remove the slice or slices from the toaster. You may need to hold the toaster over a sink and shake it gently to help loosen stuck bread. <b>Only attempt to remove stuck bread after you have unplugged the toaster from the power supply. Do not touch the metal parts inside the toaster!</b> If the food became stuck because it was too thick, make sure to slice it a little thinner in future.
<b>The toaster is too dark or too light.</b>	The selected browning level is too high or too low. Select a different setting.
<b>The toaster emits smoke.</b>	The selected browning level is too high for the type of bread toasted. Press the CANCEL button to stop the toasting cycle. Ensure the crumb trays are clean. Check to make sure no large crumbs are caught in the bread slots. Turn the unplugged unit upside down over the sink and shake gently to remove any crumbs.
<b>Bread ejects very quickly.</b>	Push down the bread lever completely. Make sure the power is switched on at the outlet. Make sure to select an appropriate browning level.



# OTHER USEFUL INFORMATION

## CARE AND CLEANING

- Always disconnect the toaster from the power outlet and allow it to cool before cleaning the toaster.
- Never immerse the toaster in water or any other liquid for cleaning. Water and liquids must never enter the toaster.
- Never clean the inside of the toaster, as this may damage the heating elements.
- Never use a metal scouring pad, abrasive materials, metal polish, harsh chemical cleaners or hard objects for cleaning any surface of the toaster.
- It is important that you remove and clean the crumb trays frequently to avoid the risk of crumbs catching fire. The crumb trays are located underneath the heating elements and can be pulled out from the back of the toaster.
- To clean the crumb trays, pull them out completely, discard the crumbs and wipe the trays clean with a dry or damp cloth.
- To remove stubborn spots, use a nylon or plastic scouring pad dampened in soapy water and squeezed almost dry. Make sure the trays are completely dry before inserting them back into the toaster.
- Do not put the crumb trays in the dishwasher.
- Wipe the outside surfaces and the cord with a soft, dry or slightly dampened cloth or sponge and a mild detergent.
- Wipe the outside surfaces and the cord with a soft, dry or slightly dampened cloth or sponge and mild detergent.
- Always let your toaster cool down completely prior to storing, especially if it is stored in a tightly enclosed space.
- Store the toaster with the cord wound up underneath the base.

## STORAGE

When in storage or not in use, the power cord may be wound around the cord storage underneath the appliance. Before storing the appliance, make sure it is dry and unplugged. Store it in the original carton, which will protect it from dust, in a clean and dry place, out of children's reach.

# SPECIFICATIONS

<b>Power Supply</b>	220-240V ~ 50/60Hz, 1370-1630W
<b>Dimensions</b>	320 (w) x 260 (d) x 200 (h) mm
<b>Weights</b>	Net: 2.6 kg / Gross: 3.5 kg



# Brooklyn

L I V I N G M A D E E A S Y

**CUSTOMER SERVICE:**

[info@ayonz.com](mailto:info@ayonz.com)

**DISTRIBUTED BY:**

Ayonz Pty Ltd