

Brooklyn

L I V I N G M A D E E A S Y

4.5L DIGITAL AIR FRYER BAF450L



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.




CONTENTS

General Safety	4
Product Overview	9
Before First Use	11
Operation	13
Cleaning and Maintenance	16
FAQs	17
Specifications	18
Customer Helpline	Last Page

GENERAL SAFETY

IMPORTANT INFORMATION

Read this manual thoroughly before you start using the Air Fryer. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to. Please follow all instructions and take notice of all warnings.

 CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN		<p>The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.</p>
<p>The cover (or back) of the unit should not be removed to prevent risk of electric shock. This unit must be serviced by a qualified service personnel only.</p>		<p>The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.</p>

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Only using furniture that can safely support the air fryer.
- Ensure the air fryer is not overhanging the edge of the supporting furniture.
- Do not place the air fryer on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the air fryer on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the air fryer or its controls and to call for an adult to assist.

GENERAL SAFETY (Cont.)

- When handling air fryer, make sure to use handle to remove basket after using the air fryer. Other surfaces may be hot.
- The outside of the air fryer is hot during and after use.
- Always use heat-resistant gloves, pads, or oven mitts when handling hot materials, and when placing items in or removing items from the air fryer, including trays, racks, accessories, or containers.
- When the air fryer is not in use, and before cleaning, turn off the appliance, then unplug from outlet. Allow to cool completely before putting on or taking off parts.
- Do not immerse the housing, cord, or plug in water or liquid.
- Closely supervise children near the air fryer.
- Do not use your air fryer if it is damaged, not working, or if the cord or plug is damaged. Contact Customer Support info@ayonz.com
- Do not use third-party replacement parts or accessories, as this may cause injuries.
- Do not use outdoors.
- Be extremely cautious when removing the basket if it contains hot oil, grease, or other hot liquids.
- Do not clean with metal scouring pads. Metal fragments can break off the pad and touch electrical parts, creating a risk of electric shock.
- Clean the basket after using and after allowing it to cool. Accumulated grease and crumbs can overheat and catch fire.
- Do not store anything on top of your air fryer when in operation. Do not store anything inside your air fryer other than recommended accessories.
- Do not operate with a separate remote control system (i.e. Timers or Wi-Fi Smart Power Plugs).
- Only use as directed in this manual.
- Not for commercial use. Household use only.

RECOMMENDED:

Air Fryers should be placed and used on a “stable, horizontal, flat and heat-resistant” surface. Must be placed on an insulated heat pad.

We recommend you purchase a heat insulation pad to be placed under the air fryer, as the heat generated from the air fryer may cause damage to the surface overtime.

GENERAL SAFETY (Cont.)

WHILE COOKING

- Do not place oversized foods or metal utensils (except for Brooklyn accessories) into your air fryer.
- Do not place paper, cardboard, or non heat-resistant plastic into your air fryer, or any materials which may catch fire or melt.
- To avoid overheating, do not use metal foil in the air fryer unless directed. Use extreme caution when using foil, and always fit foil as securely as possible.
- If the foil contacts the product heating elements, this can cause overheating and risk of fire.
- Never put baking or parchment paper into the air fryer. Air circulation can cause paper to move and touch heating elements.
- Always use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- Keep your air fryer away from flammable materials (curtains, tablecloths, walls, etc). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- Immediately turn off and unplug your air fryer if you see dark smoke coming out.
- Food is burning. Wait for smoke to clear before taking out basket.

ELECTRICAL SAFETY AND POWER CORD HANDLING

- **Voltage:** Make sure that your outlet voltage and circuit frequency correspond to the voltage stated on the appliance rating plate.
- **Power outlet:** Connect the appliance to a properly earthed power outlet, which must be easily accessible so that you can unplug it if necessary.
- **Power cord:** Do not kink or damage the power cord. Do not let it hang over the edge of a table or benchtop, and do not let it touch hot or sharp surfaces.
- Make sure the cord does not run under the Air Fryer.
- **Electrical safety:** Do not insert any objects into the appliance.

GENERAL SAFETY (Cont.)

WARNING!

- **Protect from moisture:** To reduce the risk of electrocution and other electrical hazards, do not immerse the cord or plug in water, do not spill liquids into the product, and do not operate it with wet hands.
- **Damage:** Do not use this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped. If damaged, please contact our support centre line - info@ayonz.com
- **Damaged cord:** If the appliance and/or its cord are damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard. Do not attempt to repair, disassemble, or modify the appliance. There are no user-serviceable parts inside this unit.
- **Disconnection:** Switch the appliance off and unplug it from the power supply after you have finished using it and before cleaning, servicing, maintenance, or moving the appliance. DO NOT pull the cord when disconnecting, grip the plug and pull it gently out of the outlet.

USAGE RESTRICTIONS AND CONDITIONS

- This appliance is intended for indoor domestic use only. It is not suitable for commercial, industrial or laboratory use.
- Do not use the appliance outdoors.
- The appliance is not intended to be operated by means of an external timer.


GENERAL SAFETY (Cont.)

- Do not use the appliance for anything other than its intended purpose. Drying of food or clothing and heating of warming pads and similar items may lead to risk of injury, ignition or fire.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction on the use of the appliance by a person responsible for their safety.
- Supervise children to ensure they do not play with the appliance. Do not allow children to clean the Air Fryer or perform user maintenance.
- Maintain the air fryer in a clean condition to avoid deterioration, which could affect its working life and result in a hazard risk.
- We accept no liability for any eventual damages due to improper use, incorrect handling or non compliance with these instructions.

THIS APPLIANCE IS INTENDED TO BE USED IN HOUSEHOLD AND SIMILAR APPLICATIONS SUCH AS:

- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential environments;
- Bed and breakfast type environments.

PRODUCT OVERVIEW

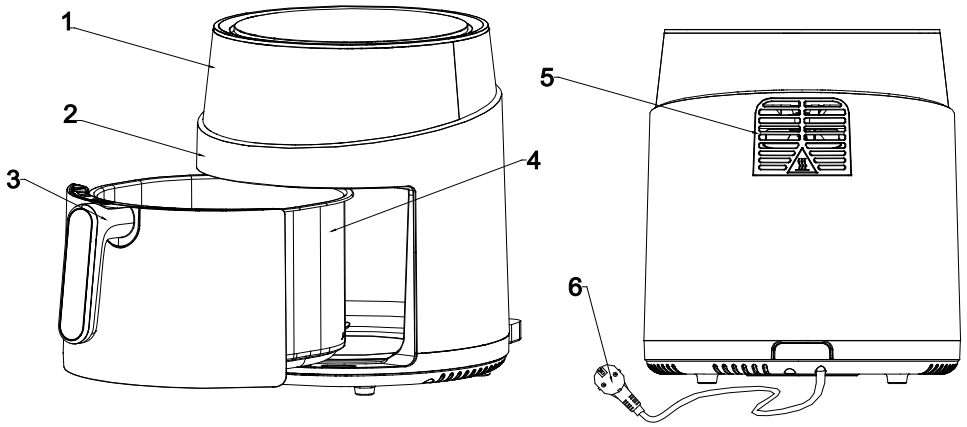

1. Control panel
2. Main housing
3. Basket handle
4. Basket
5. Air outlet
6. Main cord(Electrical cord)









PRODUCT OVERVIEW (Cont.)

This table below will help you to select the basic settings for the ingredients.

NOTE: Keep in mind that these settings are indications. As ingredients differ in origin, size, shape as well as brand, we cannot guarantee the best setting for your ingredients.

ALL INGREDIENTS SHOULD BE FROM MIN 100(G) TO MAX 400(G)

You can also use the Hot-air fryer to reheat ingredients. To reheat ingredients, set the temperature to 150°C for up to 10 minutes.

ICON	MENU	DEFAULT (TIME)	DEFAULT TEMPERATURE (°C)
	STEAK	12	180
	CHICKEN	25	180
	PRAWNS	12	200
	FISH	15	180
	PIZZA	12	160
	FRIES	18	180
	BAKING	55	145
	VEGETABLES	20	180

BEFORE FIRST USE

Before installing your appliance, read all safety instructions in this manual, especially the sections on electrical safety and installation.

UNPACKING

- When unpacking the appliance, be sure to keep all the packaging materials until you have made sure your new appliance is undamaged and in good working order. This product has been packaged to protect itself against transportation.
- Be sure to remove all packaging materials around the appliance and that the plastic film used is also removed.
- **CAUTION:** Plastic wrapping can be a suffocation hazard for babies and young children. Make sure all packaging materials are out of reach for children and that they are disposed of correctly.

INSTALLATION

- Place the Air Fryer on a flat, stable surface that can support the weight of the air fryer. Do not place the Air Fryer where heat, moisture or high humidity are generated, or near combustible materials.
- The Air Fryer is intended to be used freestanding and must not to be placed in a cabinet.
- The Air Fryer must have plenty of airflow. Allow 30cm of space above the product, 10cm at the back and 5cm on both sides. Do not cover/block any openings on the appliance. Do not remove the feet.
- The power cord must not run under the air fryer or over any hot or sharp surface.
- Make sure that the power socket is easily accessible so it can be unplugged in an emergency.

RECOMMENDED:

Air Fryers should be placed and used on a “stable, horizontal, flat and heat-resistant” surface. Must be placed on an insulated heat pad.

We recommend you purchase a heat insulation pad to be placed under the air fryer, as the heat generated from the air fryer may cause damage to the surface overtime.

BEFORE FIRST USE (Cont.)

IMPORTANT ADVICE


The plug must be connected to an appropriate outlet that is installed and earthed in accordance with local standards and requirements. If unsure, consult an electrician or a service representative. Do not, under any circumstances, cut or remove the third (grounding) prong from the power plug.

OPERATION

FIRST TIME CLEAN

Wash the baskets and crisper plates in hot, soapy water, then rinse and dry thoroughly. The crisper plates and baskets are the **ONLY** dishwasher-safe parts. **NEVER CLEAN THE MAIN UNIT IN DISHWASHER.**

CONTROL PANEL

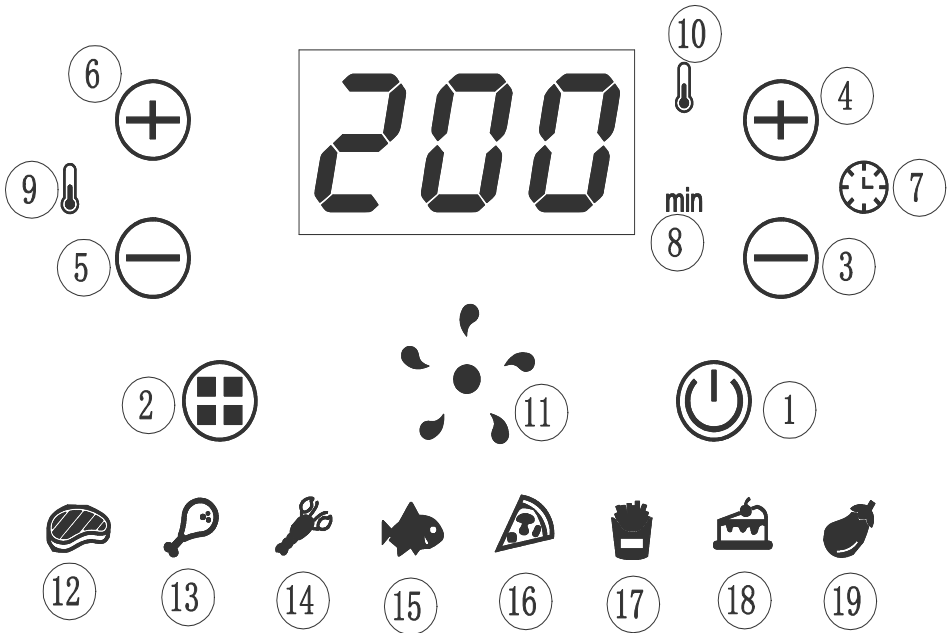


RECOMMENDED:

Air Fryers should be placed and used on a “stable, horizontal, flat and heat-resistant” surface. Must be placed on an insulated heat pad.

We recommend you purchase a heat insulation pad to be placed under the air fryer, as the heat generated from the air fryer may cause damage to the surface overtime.

OPERATION (Cont.)

OPERATION INSTRUCTIONS

1. **Power Button** - Once the pan is properly placed in the main Unit housing, the Power Button will be illuminated. Selecting the power button for 3 seconds will make the unit's default temperature 200, while the cooking time will be set to 15 minutes. Selecting the Power Button a second time will start the cooking process. Pressing the power button for 3 seconds to close the entire device during cooking. All the lights go out, the fan stops working. Note: During cooking, you can touch the button to control the pause and start of cooking.
2. **Preset Button** - Selecting the “” Preset Button enables you to scroll through the 8 popular food choices. Once selected, the predetermined time and cooking temperature function begins.
- 3/4. **Timer Control Buttons** - The + and – symbols enable you to add or decrease cooking time, one minute at a time. Keeping the button held down will rapidly change the time.
- 5/6. **Temperature Control Buttons** - The + and – symbols enable you to add or decrease cooking temperature 5°C at a time. Keeping the button held down will rapidly change the temperature.
Temperature Control range: 80°C-200°C.
- 7/8. Timer indicator.
- 9/10. Temperature indicator.
11. The center circle is heating lamp, around 5 lamp lights for motor.
12. Program Indicator Light.

OPERATION (cont.)

COOKING TIPS

Air Fryer and Parts will become hot during the cooking process.

- Do not over fill basket with food.
- Do not pack foods into basket as it will affect the cooking result.

USING OIL

Adding a small amount of oil to food can make them crispier.

Oil sprays are good for applying small amounts of oil evenly to food.

FOOD TIPS

You can air fry frozen food that can be baked in the oven.

To make cakes, hand-pies, or any foods with filling or batter, you can place foods in heat-safe container and put that in basket.

Pat dry foods with marinades before adding to basket.

REHEATING FOODS

Simply set temperature to 150° for up to 10 minutes.

CLEANING AND MAINTENANCE

NOTE:

- Do not use abrasive cleaners, metal scouring pads, or metal utensils on any part of the air fryer, including accessories. These will scratch or damage their surfaces.
 - This air fryer contains no user-serviceable parts. Any repairs should be performed by an authorized service representative.
1. Before cleaning, turn off and unplug the air fryer, and allow it to cool completely. Take out the basket by the handle for faster cooling.
 2. Apply non-abrasive liquid cleanser or a mild spray solution to a soft, damp cloth or sponge (not the product surface) and wipe all parts of the product.
 3. Do not use a dry cloth on the display screen, or it may be scratched.
 4. Let all surfaces dry completely before plugging in or turning on the product.

NOTE: After each use, wait for product to completely cool down, once cooled remove the grill plate and wash. Then empty the inside of basket.

FAQS

If experiencing issues with your air fryer and isn't operating correctly please check the following pages for solutions to the problems. If none of the solutions offered help solve the problem with your appliance then please contact our call centre on info@ayonz.com.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

PROBLEM	POSSIBLE SOLUTION
THE AIR FRYER WILL NOT TURN ON.	Make sure the air fryer is plugged in.
FOODS ARE NOT COMPLETELY COOKED.	Increase cooking temperature or time, Make sure to turn over so all sides cook evenly.
FOODS ARE COOKED UNEVENLY.	Make sure to turn over during cooking process so all sides are cooked evenly.
	Make sure food items are not too closely packed inside the basket.
WHITE SMOKE IS COMING OUT OF THE AIR FRYER.	Excess oil or fatty foods may produce white smoke. Make sure the inside of the Air Fryer is cleaned properly and not greasy.
DARK SMOKE IS COMING OUT OF THE AIR FRYER.	Immediately press and hold POWER button and unplug your air fryer. Food is burning. Wait for smoke to clear before taking out basket.
CANNOT CLOSE THE BASKET INTO THE APPLIANCE CORRECTLY.	There is too much food inside the basket.
FRESH POTATO FRIES ARE COOKED UNEVENLY	It is highly recommended once you cut up your potato into fries, to soak them in water for 30 minutes.
	Once 30 minutes is up, fry the potatoes properly then lightly coat them in oil before placing them into the air fry basket to cook.
	If you want a crispier result, you can cut the potato chips thinner.

SPECIFICATIONS

Power Supply	220-240V ~ 50-60Hz
Rated Power	1300W
Dimensions	296 (w) x 296 (d) x 335 (h) mm
Weight	Net: 3.26kg / Gross: 3.75kg

Brooklyn

L I V I N G M A D E E A S Y

CUSTOMER SERVICE:

info@ayonz.com

DISTRIBUTED BY:

Ayonz Pty Ltd